


**Model
7000**

BATTERY OPERATED PUMP

INSTRUCTIONS AND PRECAUTIONS



**SAVE THESE INSTRUCTIONS.
READ ALL PRECAUTIONS AND INSTRUCTIONS.**

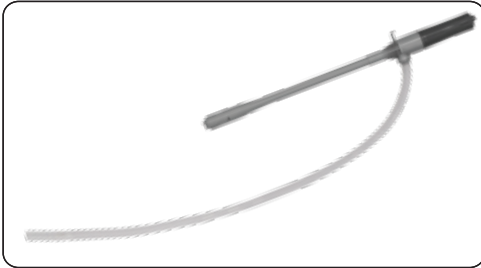

www.zeeline.com/ / (800) 231-1525

OPERATION

1. Check pump to make sure there is no damage such as splits or holes in the discharge hose before use.
2. Insert the suction pipe into the supplying container.
3. Place the discharge hose into the receiving container.
4. Both containers should be on a flat, level and stable surface. (See Fig. 3)
5. Slide the "ON/OFF" switch on top of the pump to "ON". (See Fig. 3)
6. The motor will start the impeller and draw up the liquid.
7. The "ON/OFF" switch located on the top of the handle has directions for usage. (See Fig. 3)

SPECIFICATIONS

Specifications	Delivery volume : About 2.6 GPM Main Material : P.P, P.E, Acetal
Applicable Liquids	Gasoline, Kerosene, Diesel, Water, light oils, and Other Light fluids

ASSEMBLY INSTRUCTIONS

1. Unscrew battery case in counter-clockwise direction. (See Fig. 1)

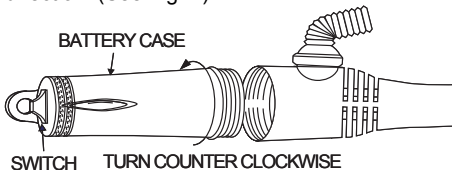


Fig. 1

2. Install two D-Size batteries according to polarity directions embossed on the Battery Case just above the threads. (See Fig. 2)

Caution: Position batteries in proper polarity and do not install batteries of different types charge levels, or capacities together.

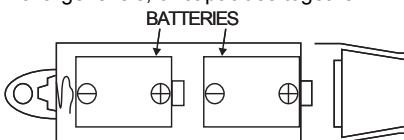


Fig. 2

3. Screw the battery case back on.
4. Make sure the discharge hose is installed securely.

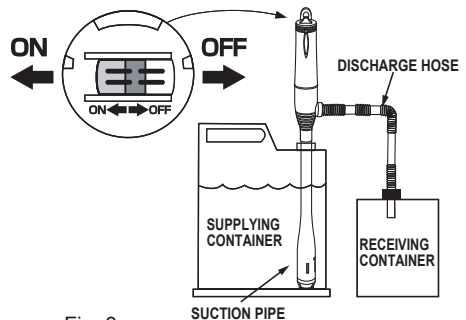


Fig. 3

CAUTION

1. Do not run dry.
2. Do not use in thinner or other solvents.
3. When pumping into fuel tank of a heater, turn heater off allow to cool.
4. Do not turn the pump upside down after use.
5. Remove batteries when not in use.

Made in Korea