

## Step 1 — Collect Materials & Tools

#	Part	Details
1.	.090" Vivak® PETG Sheet	Cut to size that meets your needs.
2.	Snap-On Wear Strip 1/8" to 3/16" Thick	Two pieces are needed cut to length for the top and bottom.
3.	Double-sided Gorilla® Tape	Used to attach the bottom strip.
4.	3 Nuts & Bolts	
5.	2 Lengths of Chain	
6.	Drill	



## Step 2 — Align the Strips

Align the top strip to the top of the sheet and hold in place temporarily to drill several holes.




## Step 3 — Drill the Holes

Drill two holes on either end of the strip and sheet (about 1" from the end and 1" down from the top), and one in the middle. Also drill two more holes to attach the chain.




## Step 4 — Fasten the Nuts & Bolts and the Chain

Fasten the nuts and bolts to attach the strip to the top of the sheet. Also hook the chain in place so it is ready to hang.

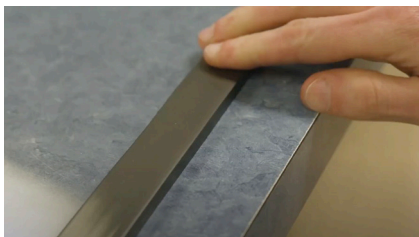

## Step 5 — Attach the Bottom Trim

Using the Gorilla® tape attach the trim to the bottom of the sheet.

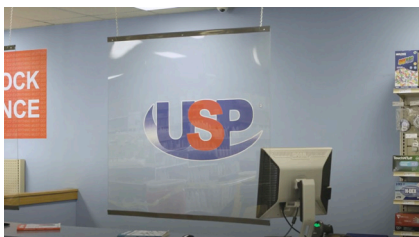

## Step 6 — It's Finished!

The shield is now complete. Stay safe & healthy!